

**Power
ON/OFF**

Flame

360° Light

Press multiple times to change the LEDs on the sides and back of the unit from white flickering to white solid to Off.

Heat ON/OFF

Brightness



**FOR MORE DETAILED REMOTE FEATURES
SEE INSTALLATION AND USERS GUIDE.**